

Driver de Led DMX – PWM 24x4A




LB-2108B-M24-5

ledbox company

AC250025

Important: Read All Instructions Prior to Installation

Function introduction

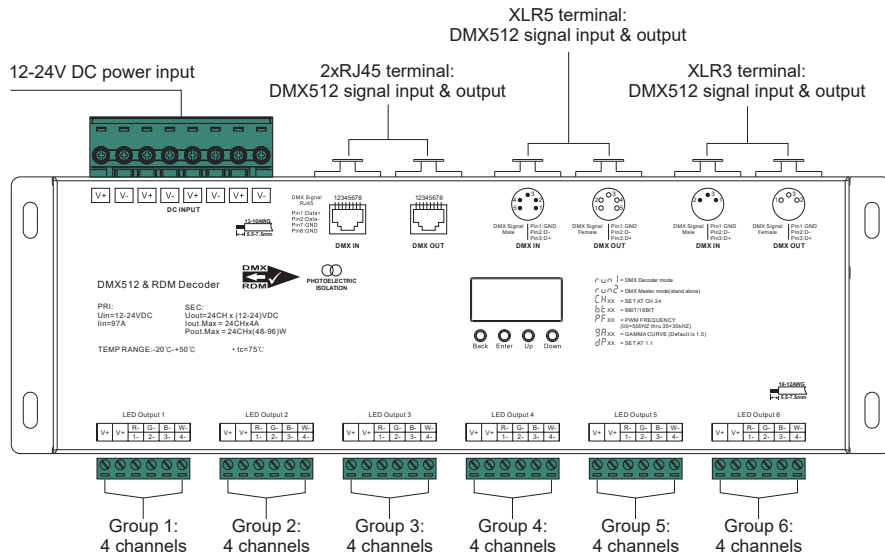

Product Data

Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)	Protection
12-24VDC	24x4A	24x(48-96)W	Constant voltage	293.2X92.2X36mm	Short circuit

- Master & decoder mode, RDM function
- Metal housing, digital display to show data directly, easily to set and show DMX address.
- With multiple kinds of DMX in/out ports: RJ 45, XLR3, XLR5 terminals.
- Total 24 PWM output channels, common anode. DMX channel quantity 1CH or 24CH settable.
- PWM output resolution ratio 8bit , 16bit settable.
- Output PWM frequency from 500HZ ~ 35K HZ settable.
- Output dimming curve gamma value from 0.1 ~ 9.9 settable.
- Decoding mode settable.
- Galvanic isolation

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Operation

Before you do other settings, please set the device to be Master or Decoder mode.

run1 = DMX Decoder mode, **run2** = DMX Master mode(stand alone).

Keep on clicking Down button, to get run1 or run2, then click Enter, then click Down button to choose 1 or 2, then click Back button.

I. For run2 DMX Master mode: After set the device as run2 (Master mode), if keep on clicking Up button, you will find below menu on display:

8888 Means brightness for each output PWM channel. First 01 means PWM output channel 1 and it is selectable from 01 to 24 by clicking "UP" or "Down" button. Second 01 means brightness level, click "Enter" button, the display flashes, then click "UP" or "Down" button to select from 00-99-FL, which means 0%-99%-100% brightness, then click "Back" button to confirm.



Back Enter Up Down

8888 means chasing effects, total 4 effects selectable from 01-04. Click "Up" or "Down" button to select the menu, then click "Enter" button to enter into the effect, then click "Up" or "Down" button to select from 01-04.

CA01: Fade-up (0%-100%) and fade-down (100%-0%) of output 1, then output 2, output 3,, output 24, output 1,, cycling chasing

CA02: Fade-up (0%-100%) of output 1, then simultaneous fade-down (100%-0%) of output 1 and fade-up (0%-100%) of output 2, simultaneous down of output 2 and up of output 3,, simultaneous down of output 23 and up of output 24, simultaneous down of output 24 and up of output 1,, cycling chasing

CA03: Fade-up (0%-100%) of output 1, then output 2, output 3,, output 24, output 1,, cycling chasing

CA04: Fade-down (100%-0%) of output 1, then output 2, output 3,, output 24, output 1,, cycling chasing

8888 means chasing speed, it is selectable from 01-09, 01 is the slowest, 09 is the fastest.

II. For run1 DMX decoder mode: After set the device as run1 (Decoder mode), if keep on clicking Up button, you will find below menu on display:

DMX signal indicator **●** : When DMX signal input is detected, the indicator on the display following after **8** turns on red **8.XXX** , if there is no DMX signal input, the indicator will not turn on, and the character **8** will flash.

8888 you will get this after power on the decoder, it means this decoder supports firmware OTA update function.

8.XXX Means DMX address. factory defaults setting is 001.

88XX Means DMX channels quantity. factory defaults setting is Ch24

88XX Means Bit (8bit or 16bit). factory defaults setting is 16bit

88XX Means output PWM frequency. factory defaults setting is 10K HZ


88XX Means output dimming curve gamma value, factory defaults setting is ga 1.5

88XX Means Decoding mode, factory defaults setting is dp1.1

run1 Means the device at run1 mode (DMX decoder mode).

By holding button Back + Enter together at the same time over 5 seconds until the display go off, it will restore default settings .

Wiring diagram

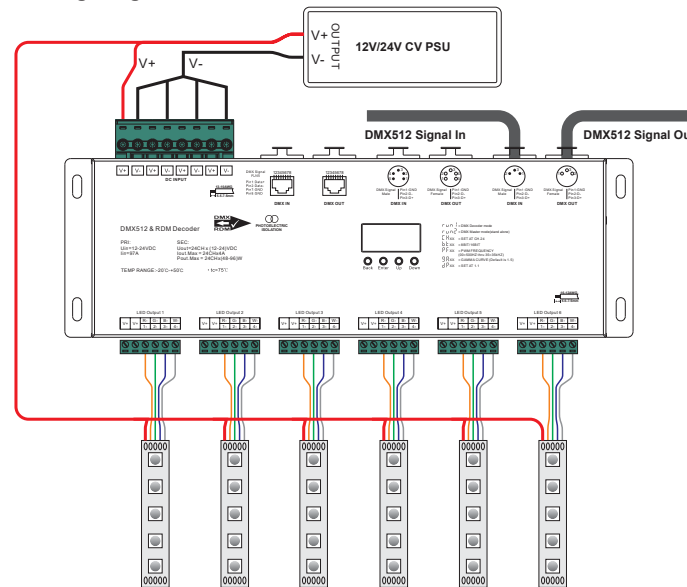

1. Firmware OTA update:

This function can be used when there is a firmware update from the manufacturer, the update can be executed through a Windows computer and an USB to serial port converter, the converter will connect the computer and the decoder's hard wire DMX port. A software RS485-OTW on the computer will be used to push the firmware to the decoder.

Run the OTA tool RS465-OTW on the computer, select the correct communication port "USB-SERIAL", baudrate "250000", and data bit "9", use default settings for other configurations. Then click "file" button to select the new firmware from the computer, then click "Open Port", the firmware will be loaded. Then click "Download Firmware", the right side state column of the OTA tool will show "send link". Then power on the decoders before "wait erase" displaying on the state column, the digital display of the decoders will show **1000**. Then "wait erase" will show on the state column, which means the updating starts. Then the OTA tool starts writing data to the decoders, the state column will show the progress, once writing data finishes, the digital display of the decoders will flash **1000**, which means firmware updated successfully.

Select menu **8 XXX**, click button "Enter", display flashes, then click or hold button "Up" / "Down" to set DMX address (click is slow, hold is fast.), then click button "Back" to confirm.

Select menu **08XX**, click button "Enter", display flashes, then click button "Up" / "Down" to set DMX channel quantity, then click button "Back" to confirm.


CH01=1 DMX address for all the output channels, which are all address 001.

CH24=24 DMX addresses, output 1-24 is address 001-024 respectively.

Select menu **88 XX**, click button "Enter", display flashes, then click button "Up" / "Down" to choose 08 or 16 bit, then click button "Back" to confirm.

Select menu **PF XX**, click button "Enter", display flashes, then click button "Up" / "Down" to choose 00~35, then click button "Back" to confirm.
00=500HZ. 01=1kHz. 02=2kHz. 25=25kHz. 35=35kHz.

Select menu **99 XX**, click button “Enter”, display flashes, then click or hold button “Up” / “Down” to choose 0.1~9.9, then click button “Back” to confirm.

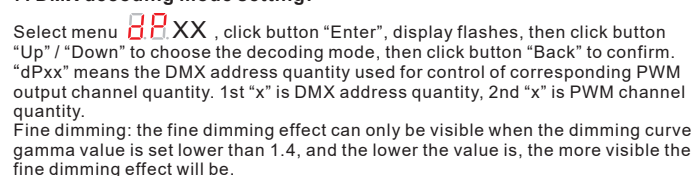

DMX Console Slider number	dp1.1	dp2.1	dp3.2	dp3.4	dp4.3	dp5.3	dp5.4	dp6.4	dp8.6	dp9.6
DMX channel										
1	output 1 dimming	output 1 dimming	output 1&2 dimming	output 1&2 &3&4 dimming	output 1&2 &3 dimming	output 1&2 &3 dimming	output 1&2 &3&4 dimming	output 1&2 &3&4 dimming	output 1&2 &3&4 dimming	output 1&2 &3&4 dimming
2	output 2 dimming	output 1 fine dimming	output 1 dimming	output 1 &3 dimming	output 1 dimming	output 1 dimming	output 1 dimming	output 1 dimming	output 1 dimming	output 1 dimming
3	output 3 dimming	output 2 dimming	output 2 dimming	output 2&4 dimming	output 2 dimming	output 2 dimming	output 2 dimming	output 2 dimming	output 2 dimming	output 2 dimming
4	output 4 dimming	output 2 fine dimming	output 3&4 dimming	output 5&6 &7&8 dimming	output 3 dimming	output 3 dimming	output 3 dimming	output 3 dimming	output 3 dimming	output 3 dimming
5	output 5 dimming	output 3 dimming	output 3 dimming	output 5&7 dimming	output 4&5 &6 dimming	output 1&2 &3 strobe effects	output 4 dimming	output 4 dimming	output 4 dimming	output 4 dimming
6	output 6 dimming	output 3 fine dimming	output 4 dimming	output 5&6 &8 dimming	output 4 dimming	output 4&5 &6 dimming	output 5&6 &7&8 dimming	output 1&2&3 &4 strobe effects	output 5&6 dimming	output 5&6 dimming
7	output 7 dimming	output 4 dimming	output 5&6 dimming	output 9&10&11 &12 dimming	output 5 dimming	output 4 dimming	output 5 dimming	output 5&6 &7&8 dimming	output 5 dimming	output 5 dimming
8	output 8 dimming	output 4 fine dimming	output 5 dimming	output 9&11 dimming	output 6 dimming	output 5 dimming	output 6 dimming	output 5 dimming	output 6 dimming	output 6 dimming
9	output 9 dimming	output 5 dimming	output 6 dimming	output 10 &12 dimming	output 7&8 &9 dimming	output 6 dimming	output 7 dimming	output 6 dimming	output 7&8&9 &10 dimming	output 1&2&3&4 &5&6 strobe effects
10	output 10 dimming	output 5 fine dimming	output 7&8 dimming	output 13&14 &15&16 dimming	output 7 dimming	output 4&5 &6 strobe effects	output 8 dimming	output 7 dimming	output 7 dimming	output 7&8&9 &10 dimming
11	output 11 dimming	output 6 dimming	output 7 dimming	output 13&15 dimming	output 8 dimming	output 7&8 &9 dimming	output 9&10&11 &12 dimming	output 8 dimming	output 8 dimming	output 7 dimming
12	output 12 dimming	output 6 fine dimming	output 8 dimming	output 14 &16 dimming	output 9 dimming	output 7 dimming	output 9 dimming	output 5&6&7 &8 strobe effects	output 9 dimming	output 8 dimming
13	output 13 dimming	output 7 dimming	output 9&10 dimming	output 17&18 &19&20 dimming	output 10&11 &12 dimming	output 8 dimming	output 10 dimming	output 9&10 &11&12 dimming	output 10 dimming	output 9 dimming
14	output 14 dimming	output 7 fine dimming	output 9 dimming	output 17&19 dimming	output 10 dimming	output 9 dimming	output 11 dimming	output 9 dimming	for output 11 &12 dimming	output 10 dimming
15	output 15 dimming	output 8 dimming	output 10 dimming	output 18 &20 dimming	output 11 dimming	output 7&8&9 strobe effects	output 12 dimming	output 10 dimming	for output 11 dimming	output 11&12 dimming
16	output 16 dimming	output 8 fine dimming	output 11&12 dimming	output 21&22 &23&24 dimming	output 12 dimming	output 10&11 &12 dimming	output 13&14 &15&16 dimming	output 11 dimming	for output 12 dimming	output 11 dimming
17	output 17 dimming	output 9 dimming	output 11 dimming	output 21&23 dimming	output 13&14 &15 dimming	output 10 dimming	output 13 dimming	output 12 dimming	output 13&14 &15&16 dimming	output 12 dimming
18	output 18 dimming	output 9 fine dimming	output 12 dimming	output 22 &24 dimming	output 13 dimming	output 11 dimming	output 14 dimming	output 10&11 &12 strobe effects	output 13 dimming	output 7&8&9&10 &11&12 strobe effects
19	output 19 dimming	output 10 dimming	output 13&14 dimming	output 13&14 dimming	output 14 dimming	output 12 dimming	output 15 dimming	output 13&14 &15&16 dimming	output 14 dimming	output 13&14&15 &16 dimming
20	output 20 dimming	output 10 fine dimming	output 13 dimming	output 13 dimming	output 15 dimming	output 10&11&12 strobe effects	output 16 dimming	output 13 dimming	output 15 dimming	output 13 dimming
21	output 21 dimming	output 11 dimming	output 14 dimming	output 16&17 &18 dimming	output 16&17 &18 dimming	output 13&14 &15 dimming	output 17&18 &19&20 dimming	output 14 dimming	output 16 dimming	output 14 dimming
22	output 22 dimming	output 11 fine dimming	output 15&16 dimming	output 16 dimming	output 16 dimming	output 13 dimming	output 17 dimming	output 15 dimming	for output 17 &18 dimming	output 15 dimming
23	output 23 dimming	output 12 dimming	output 15 dimming	output 17 dimming	output 17 dimming	output 14 dimming	output 18 dimming	output 16 dimming	for output 17 dimming	output 16 dimming
24	output 24 dimming	output 12 fine dimming	output 16 dimming	output 18 dimming	output 18 dimming	output 15 dimming	output 19 dimming	output 13&14&15 &16 strobe effects	for output 18 dimming	output 17&18 dimming
25		output 13 dimming	output 17&18 dimming		output 19&20 &21 dimming	output 13&14&15 strobe effects	output 20 dimming	output 17&		

DMX address is 001, CH01

DMX Console Slider number DMX channel	dp1.1	dp2.1	dp2.2	dp3.1
1	all output dimming	all output dimming	all output dimming	all output dimming
2		all output fine dimming	all output strobe effects	all output fine dimming
3				all output strobe effects

DMX address is 001, CH04

DMX Console Slider number DMX channel	dp1.6
1	output 1, 5, 9, 13, 17, 21 dimming
2	output 2, 6, 10, 14, 18, 22 dimming
3	output 3, 7, 11, 15, 19, 23 dimming
4	output 4, 8, 12, 16, 20, 24 dimming

The data definitions for strobe channel are as follows:

{0, 7},//undefined
{8, 65},//slow strobe-->fast strobe
{66, 71},//undefined
{72, 127},//slow push fast close
{128, 133},//undefined
{134, 189},//slow close fast push
{190, 195},//undefined
{196, 250},//random strobe
{251, 255},//undefined

The supported RDM PIDs are as follows:

DISC_UNIQUE_BRANCH
DISC_MUTE
DISC_UN_MUTE
DEVICE_INFO
DMX_START_ADDRESS
IDENTIFY_DEVICE
SOFTWARE_VERSION_LABEL
DMX_PERSONALITY
DMX_PERSONALITY_DESCRIPTION
SLOT_INFO
SLOT_DESCRIPTION
OUT_RESPONSE_TIME
OUT_RESPONSE_TIME_DESCRIPTION
MANUFACTURER_LABEL
SUPPORTED_PARAMETERS
MODULATION_FREQUENCY
MODULATION_FREQUENCY_DESCRIPTION
CURVE
CURVE_DESCRIPTION

RDM Discovery Indication:

When using RDM to discover the device, the digital display will flash and the connected lights will also flash at the same frequency to indicate. Once the display stops flashing, the connected light also stops flashing.

Restore to Factory Default Setting

Press and hold down both "Back" and "Enter" keys until the digital display turns off, then release the keys, system will reset and the digital display will turn on again, all settings will be restored to factory default.

Default settings are as follows:

DMX Address Code: a001
DMX Address Quantity: SW1=0: ch24, SW1=1: ch01
PWM Resolution Mode: bt16
PWM Frequency: pf10
Gamma: ga1.5
Decoding Mode: dp1.1