

Driver de Led DMX – PWM 24x4A




LX-2108B-M24-5



Important: Read All Instructions Prior to Installation

Function introduction

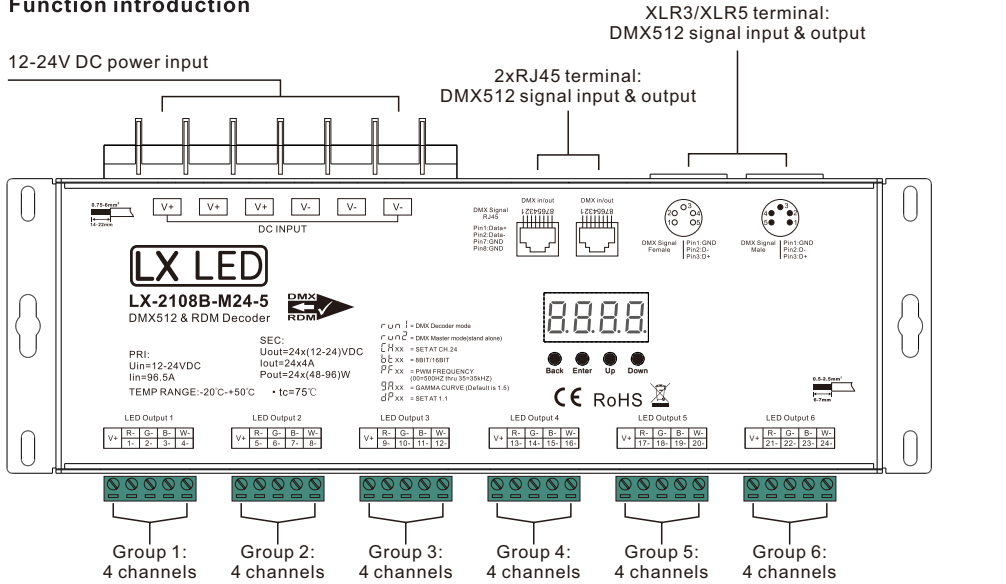

Product Data

Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)	Protection
12-24VDC	24x4A	24x(48-96)W	Constant voltage	293.2X92.2X36mm	Short circuit

- Master & decoder mode, RDM function
- Metal housing, digital display to show data directly, easily to set and show DMX address.
- With multiple kinds of DMX in/out ports: RJ 45, XLR3, XLR5 terminals.
- Total 24 PWM output channels, common anode. DMX channel quantity 1CH or 24CH settable.
- PWM output resolution ratio 8bit , 16bit settable.
- Output PWM frequency from 500HZ ~ 35K HZ settable.
- Output dimming curve gamma value from 0.1 ~ 9.9 settable.
- Decoding mode settable.
- Galvanic isolation

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Operation

Before you do other settings, please set the device to be Master or Decoder mode.

run1 = DMX Decoder mode , run2 = DMX Master mode(stand alone).

Keep on clicking Down button, to get run1 or run2, then click Enter, then click Down button to choose 1 or 2, then click Back button.

I. For run2 DMX Master mode: After set the device as run2 (Master mode), if keep on clicking Up button, you will find below menu on display:

8.8.8.8 Means brightness for each output PWM channel. First 01 means PWM output channel 1 and it is selectable from 01 to 24 by clicking “UP” or “Down” button. Second 01 means brightness level, click “Enter” button, the display flashes, then click “UP” or “Down” button to select from 00-99-FL, which means 0%-99%-100% brightness, then click “Back” button to confirm.



8.8.8.8 means chasing effects, total 4 effects selectable from 01-04. Click “Up” or “Down” button to select the menu, then click “Enter” button to enter into the effect, then click “Up” or “Down” button to select from 01-04.

CA01: Fade-up (0%-100%) and fade-down (100%-0%) of output 1, then output 2, output 3,, output 24, output 1,, cycling chasing

CA02: Fade-up (0%-100%) of output 1, then simultaneous fade-down (100%-0%) of output 1 and fade-up (0%-100%) of output 2, simultaneous down of output 2 and up of output 3,, simultaneous down of output 23 and up of output 24, simultaneous down of output 24 and up of output 1,, cycling chasing

CA03: Fade-up (0%-100%) of output 1, then output 2, output 3,, output 24, output 1,, cycling chasing

CA04: Fade-down (100%-0%) of output 1, then output 2, output 3,, output 24, output 1,, cycling chasing

8.8.8.8 means chasing speed, it selectable from 01-09, 01 is the slowest, 09 is the fastest.

II. For run1 DMX decoder mode: After set the device as run1 (Decoder mode), if keep on clicking Up button, you will find below menu on display:

DMX signal indicator ● : When DMX signal input is detected, the indicator on the display following after 8 turns on red **8.XXX** , if there is no DMX signal input, the indicator will not turn on, and the character 8 will flash.

8.8.8.8 you will get this after power on the decoder, it means this decoder supports firmware OTA update function.

8.XXX Means DMX address. factory defaults setting is 001.

8.8.XX Means DMX channels quantity. factory defaults setting is Ch24

8.8.XX Means Bit (8bit or 16bit). factory defaults setting is 16bit

8.8.XX Means output PWM frequency. factory defaults setting is 10K HZ


8.8.XX Means output dimming curve gamma value, factory defaults setting is ga 1.5

8.8.XX Means Decoding mode, factory defaults setting is dp1.1

run1 Means the device at run1 mode (DMX decoder mode).

By holding button Back + Enter together at the same time over 5 seconds until the display go off, it will restore default settings .

Wiring diagram

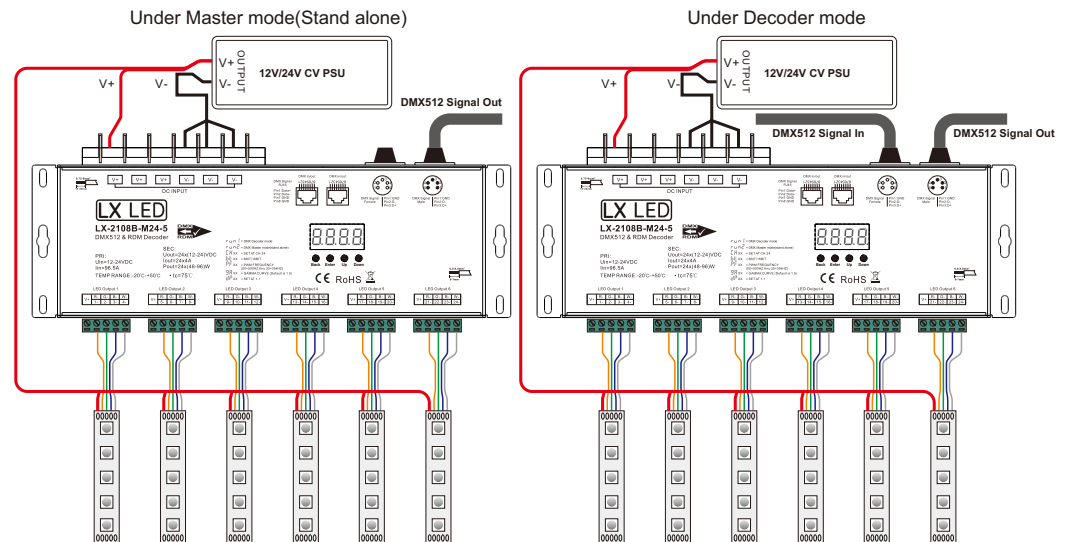

1. Firmware OTA update:

This function can be used when there is a firmware update from the manufacturer, the update can be executed through a Windows computer and an USB to serial port converter, the converter will connect the computer and the decoder’s hard wire DMX port. A software RS485-OTW on the computer will be used to push the firmware to the decoder.

Connect the computer and the decoder through the USB to serial port converter, if you need to update multiple decoders' firmware, connect the converter to first decoder's DMX port, then connect other decoders to the first decoder in daisy chain through the DMX port. Please do not power on the decoders.

Run the OTA tool RS485-OTW on the computer, select the correct communication port "USB-SERIAL", baudrate "250000", and data bit "9", use default settings for other configurations. Then click "file" button to select the new firmware from the computer, then click "Open Port", the firmware will be loaded. Then click "Download Firmware", the right side state column of the OTA tool will show "send link". Then power on the decoders before "wait erase" displaying on the state column, the digital display of the decoders will show **8888**. Then "wait erase" will show on the state column, which means the updating starts. Then the OTA tool starts writing data to the decoders, the state column will show the progress, once writing data finishes, the digital display of the decoders will flash **8888**, which means firmware updated successfully.

2. DMX address setting:

Select menu **8 XXX**, click button "Enter", display flashes, then click or hold button "Up" / "Down" to set DMX address (click is slow, hold is fast.), then click button "Back" to confirm.

3. DMX channel quantity setting:

Select menu **88 XX**, click button "Enter", display flashes, then click button "Up" / "Down" to set DMX channel quantity, then click button "Back" to confirm.

For example the DMX address is already set as 001.

CH01=1 DMX address for all the output channels, which are all address 001.

CH04=4 DMX addresses, output channels 1, 5, 9, 13, 17, 21 are address 001, output channels 2, 6, 10, 14, 18, 22 are address 002, output channels 3, 7, 11, 15, 19, 23 are address 003, output channels 4, 8, 12, 16, 20, 24 are address 004.

CH24=24 DMX addresses, output 1-24 is address 001-024 respectively.

4. PWM output resolution Bit setting:


Select menu **88 XX**, click button "Enter", display flashes, then click button "Up" / "Down" to choose 08 or 16 bit, then click button "Back" to confirm.

5. Output PWM frequency setting:

Select menu **88 XX**, click button "Enter", display flashes, then click button "Up" / "Down" to choose 00~35, then click button "Back" to confirm. 00=500HZ, 01=1kHz, 02=2kHz.....25=25kHz, 35=35kHz.

6. Output dimming curve gamma value setting:

Select menu **88 XX**, click button "Enter", display flashes, then click or hold button "Up" / "Down" to choose 0.1~9.9, then click button "Back" to confirm.

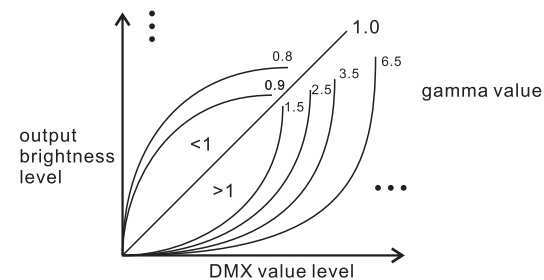

7. DMX decoding mode setting:

Select menu **88 XX**, click button "Enter", display flashes, then click button "Up" / "Down" to choose the decoding mode, then click button "Back" to confirm. "dPxx" means the DMX address quantity used for control of corresponding PWM output channel quantity. 1st "x" is DMX address quantity, 2nd "x" is PWM channel quantity.

Fine dimming: the fine dimming effect can only be visible when the dimming curve gamma value is set lower than 1.4, and the lower the value is, the more visible the fine dimming effect will be.

DMX address is 001, CH24

DMX Console Slider number DMX channel	dp1.1	dp2.1	dp3.2	dp3.4	dp4.3	dp5.3	dp5.4	dp6.4	dp8.6	dp9.6
1	output 1 dimming	output 1 dimming	output 1&2 dimming	output 1&2 &3&4 dimming	output 1&2 &3 dimming	output 1&2 &3 dimming	output 1&2 &3&4 dimming	output 1&2 &3&4 dimming	output 1&2 &3&4 dimming	output 1&2 &3&4 dimming
2	output 2 dimming	output 1 fine dimming	output 1 dimming	output 1 &3 dimming	output 1 dimming	output 1 dimming	output 1 dimming	output 1 dimming	output 1 dimming	output 1 dimming
3	output 3 dimming	output 2 dimming	output 2 dimming	output 2&4 dimming	output 2 dimming	output 2 dimming	output 2 dimming	output 2 dimming	output 2 dimming	output 2 dimming
4	output 4 dimming	output 2 fine dimming	output 3&4 dimming	output 5&6 &7&8 dimming	output 3 dimming	output 3 dimming	output 3 dimming	output 3 dimming	output 3 dimming	output 3 dimming
5	output 5 dimming	output 3 dimming	output 3 dimming	output 5&7 dimming	output 4&5 &6 dimming	output 4 dimming	output 4 dimming	output 4 dimming	output 4 dimming	output 4 dimming
6	output 6 dimming	output 3 fine dimming	output 4 dimming	output 6 &8 dimming	output 4 dimming	output 4&5 &6 dimming	output 5&6 &7&8 dimming	output 1&2&3 &4 strobe effects	output 5&6 dimming	output 5&6 dimming
7	output 7 dimming	output 4 dimming	output 5&6 dimming	output 9&10&11 &12 dimming	output 5 dimming	output 4 dimming	output 5 dimming	output 5&6 &7&8 dimming	output 5 dimming	output 5 dimming
8	output 8 dimming	output 4 fine dimming	output 5 dimming	output 9&11 dimming	output 6 dimming	output 5 dimming	output 6 dimming	output 5 dimming	output 6 dimming	output 6 dimming
9	output 9 dimming	output 5 dimming	output 6 dimming	output 10 &12 dimming	output 7&8 &9 dimming	output 6 dimming	output 7 dimming	output 6 dimming	output 7&8&9 &10 dimming	output 1&2&3&4 &5&6 strobe effects
10	output 10 dimming	output 5 fine dimming	output 7&8 dimming	output 13&14& 15&16 dimming	output 7 dimming	output 4&5 &6 strobe effects	output 8 dimming	output 7 dimming	output 7 dimming	output 7&8&9 &10 dimming
11	output 11 dimming	output 6 dimming	output 7 dimming	output 13&15 dimming	output 8 dimming	output 7&8 &9 dimming	output 9&10&11 &12 dimming	output 8 dimming	output 8 dimming	output 7 dimming
12	output 12 dimming	output 6 fine dimming	output 8 dimming	&16 dimming	output 9 dimming	output 9 dimming	output 9 dimming	output 5&6&7 &8 strobe effects	output 9 dimming	output 8 dimming
13	output 13 dimming	output 7 dimming	output 9&10 dimming	output 17&18& 19&20 dimming	output 10&11 &12 dimming	output 8 dimming	output 10 dimming	output 9&10 &11&12 dimming	output 10 dimming	output 9 dimming
14	output 14 dimming	output 7 fine dimming	output 9 dimming	output 17&19 dimming	output 10 dimming	output 9 dimming	output 9 dimming	output 9 dimming	for output 11 &12 dimming	output 10 dimming
15	output 15 dimming	output 8 dimming	output 10 dimming	output 18 &20 dimming	output 11 dimming	output 7&8&9 strobe effects	output 12 dimming	output 10 dimming	for output 11 dimming	output 11&12 dimming
16	output 16 dimming	output 8 fine dimming	output 11&12 dimming	output 21&22& 23&24 dimming	output 12 dimming	output 10&11& 12 dimming	output 13&14& 15&16 dimming	output 11 dimming	for output 12 dimming	output 11 dimming
17	output 17 dimming	output 9 dimming	output 11 dimming	output 21&23 dimming	output 13&14 &15 dimming	output 10 dimming	output 13 dimming	output 12 dimming	output 13&14& 15&16 dimming	output 12 dimming
18	output 18 dimming	output 9 fine dimming	output 12 dimming	output 22 &24 dimming	output 13 dimming	output 11 dimming	output 14 dimming	output 9&10&11 &12 strobe effects	output 13 dimming	output 7&8&9&10 &11&12 strobe effects
19	output 19 dimming	output 10 dimming	output 13&14 dimming	output 14 dimming	output 14 dimming	output 12 dimming	output 15 dimming	output 13&14 &15&16 dimming	output 14 dimming	output 13&14&15 &16 dimming
20	output 20 dimming	output 10 fine dimming	output 13 dimming	output 15 dimming	output 15 dimming	output 10&11&12 strobe effects	output 16 dimming	output 13 dimming	output 15 dimming	output 13 dimming
21	output 21 dimming	output 11 dimming	output 14 dimming	output 16&17 &18 dimming	output 16 dimming	output 13&14& 15 dimming	output 17&18& 19&20 dimming	output 14 dimming	output 16 dimming	output 14 dimming
22	output 22 dimming	output 11 fine dimming	output 15&16 dimming	output 16 dimming	output 16 dimming	output 13 dimming	output 17 dimming	output 15 dimming	for output 17 &18 dimming	output 15 dimming
23	output 23 dimming	output 12 dimming	output 15 dimming	output 17 dimming	output 17 dimming	output 14 dimming	output 18 dimming	output 16 dimming	for output 17 dimming	output 16 dimming
24	output 24 dimming	output 12 fine dimming	output 16 dimming	output 18 dimming	output 18 dimming	output 15 dimming	output 19 dimming	output 13&14&15 &16 strobe effects	for output 18 dimming	output 17&18 dimming
25	output 25 dimming	output 13 dimming	output 17&18 dimming	output 19&20 &21 dimming	output 19&20 &21 dimming	output 13&14&15 strobe effects	output 20 dimming	output 11&15 &19&20 dimming	output 19&20& 21&22 dimming	output 17 dimming
26	output 26 dimming	output 13 fine dimming	output 17 dimming	output 19 dimming	output 20 dimming	output 16&17& 18 dimming	output 21&22& 23&24 dimming	output 17 dimming	output 19 dimming	output 18 dimming
27	output 27 dimming	output 14 dimming	output 18 dimming	output 20 dimming	output 21 dimming	output 16 dimming	output 21 dimming	output 18 dimming	output 20 dimming	output 13&14&15&16 &17&18 strobe effects
28	output 28 dimming	output 14 fine dimming	output 19&20 dimming	output 21 dimming	output 21 dimming	output 17 dimming	output 22 dimming	output 19 dimming	output 21 dimming	output 19&20&21 &22 dimming
29	output 29 dimming	output 15 dimming	output 19 dimming	output 22&23 &24 dimming	output 22&23 &24 dimming	output 18 dimming	output 23 dimming	output 20 dimming	output 22 dimming	output 19 dimming
30	output 30 dimming	output 15 fine dimming	output 20 dimming	output 23 dimming	output 23 dimming	output 16&17&18 strobe effects	output 24 dimming	output 17&18&19 &20 strobe effects	output 23&24 dimming	output 20 dimming
31	output 31 dimming	output 16 dimming	output 21&22 dimming	output 23 dimming	output 24 dimming	output 19&20& 21 dimming	output 19 dimming	output 21&22 &23&24 dimming	output 23 dimming	output 21 dimming
32	output 32 dimming	output 16 fine dimming	output 21 dimming	output 24 dimming	output 24 dimming	output 20 dimming	output 21 dimming	output 21 dimming	output 24 dimming	output 22 dimming
33	output 33 dimming	output 17 dimming	output 22 dimming	output 22 dimming	output 20 dimming	output 20 dimming	output 22 dimming	output 22 dimming	output 24 dimming	output 23&24 dimming
34	output 34 dimming	output 17 fine dimming	output 23&24 dimming	output 23 dimming	output 21 dimming	output 21 dimming	output 23 dimming	output 23 dimming	output 24 dimming	output 23 dimming
35	output 35 dimming	output 18 dimming	output 23 dimming	output 23 dimming	output 19&20&21 strobe effects	output 22&23& 24 dimming	output 22&23& 24 dimming	output 24 dimming	output 24 dimming	output 24 dimming
36	output 36 dimming	output 18 fine dimming	output 24 dimming	output 24 dimming	output 22&23& 24 dimming	output 22&23& 24 dimming	output 22&23& 24 dimming	output 21&22&23 &24 strobe effects	output 24 dimming	output 19&20&21&22 &23&24 strobe effects
37	output 37 dimming	output 19 dimming	output 21 dimming	output 23 dimming	output 22 dimming	output 22 dimming	output 22 dimming			
38	output 38 dimming	output 19 fine dimming	output 21 dimming	output 23 dimming	output 23 dimming	output 23 dimming	output 23 dimming			
39	output 39 dimming	output 20 dimming	output 20 dimming	output 23 dimming	output 24 dimming	output 24 dimming	output 24 dimming			
40	output 40 dimming	output 20 fine dimming	output 21 dimming	output 23 dimming	output 24 dimming	output 22&23&24 strobe effects	output 24 dimming			
41	output 41 dimming	output 21 dimming	output 21 dimming	output 23 dimming	output 24 dimming					
42	output 42 dimming	output 21 fine dimming	output 21 dimming	output 23 dimming	output 24 dimming					
43	output 43 dimming	output 22 dimming	output 22 dimming	output 23 dimming	output 24 dimming					
44	output 44 dimming	output 22 fine dimming	output 22 dimming	output 23 dimming	output 24 dimming					
45	output 45 dimming	output 23 dimming	output 23 dimming	output 23 dimming	output 24 dimming					
46	output 46 dimming	output 23 fine dimming	output 23 dimming	output 23 dimming	output 24 dimming					
47	output 47 dimming	output 24 dimming	output 24 dimming	output 24 dimming	output 24 dimming					
48	output 48 dimming	output 24 fine dimming	output 24 dimming	output 24 dimming	output 24 dimming					

DMX address is 001, CH01

DMX Console Slider number / DMX channel	dp1.1	dp2.1	dp2.2	dp3.1
1	all output dimming	all output dimming	all output dimming	all output dimming
2		all output fine dimming	all output strobe effects	all output fine dimming
3				all output strobe effects

DMX address is 001, CH04

DMX Console Slider number / DMX channel	dp1.6
1	output 1, 5, 9, 13, 17, 21 dimming
2	output 2, 6, 10, 14, 18, 22 dimming
3	output 3, 7, 11, 15, 19, 23 dimming
4	output 4, 8, 12, 16, 20, 24 dimming

The data definitions for strobe channel are as follows:

```
{0, 7},//undefined
{8, 65},//slow strobe-->fast strobe
{66, 71},//undefined
{72, 127},//slow push fast close
{128, 133},//undefined
{134, 189},//slow close fast push
{190, 195},//undefined
{196, 250},//random strobe
{251, 255},//undefined
```

The supported RDM PIDs are as follows:

```
DISC_UNIQUE_BRANCH
DISC_MUTE
DISC_UN_MUTE
DEVICE_INFO
DMX_START_ADDRESS
IDENTIFY_DEVICE
SOFTWARE_VERSION_LABEL
DMX_PERSONALITY
DMX_PERSONALITY_DESCRIPTION
SLOT_INFO
SLOT_DESCRIPTION
OUT_RESPONSE_TIME
OUT_RESPONSE_TIME_DESCRIPTION
MANUFACTURER_LABEL
SUPPORTED_PARAMETERS
MODULATION_FREQUENCY
MODULATION_FREQUENCY_DESCRIPTION
CURVE
CURVE_DESCRIPTION
```

RDM Discovery Indication:

When using RDM to discover the device, the digital display will flash and the connected lights will also flash at the same frequency to indicate. Once the display stops flashing, the connected light also stops flashing.

Restore to Factory Default Setting

Press and hold down both "Back" and "Enter" keys until the digital display turns off, then release the keys, system will reset and the digital display will turn on again, all settings will be restored to factory default.

Default settings are as follows:

```
DMX Address Code: a001
DMX Address Quantity: SW1=0: ch24, SW1=1: ch01
PWM Resolution Mode: bt16
PWM Frequency: pf10
Gamma: ga1.5
Decoding Mode: dp1.1
```